


LP-A30L

SPARE PARTS DIAGRAM

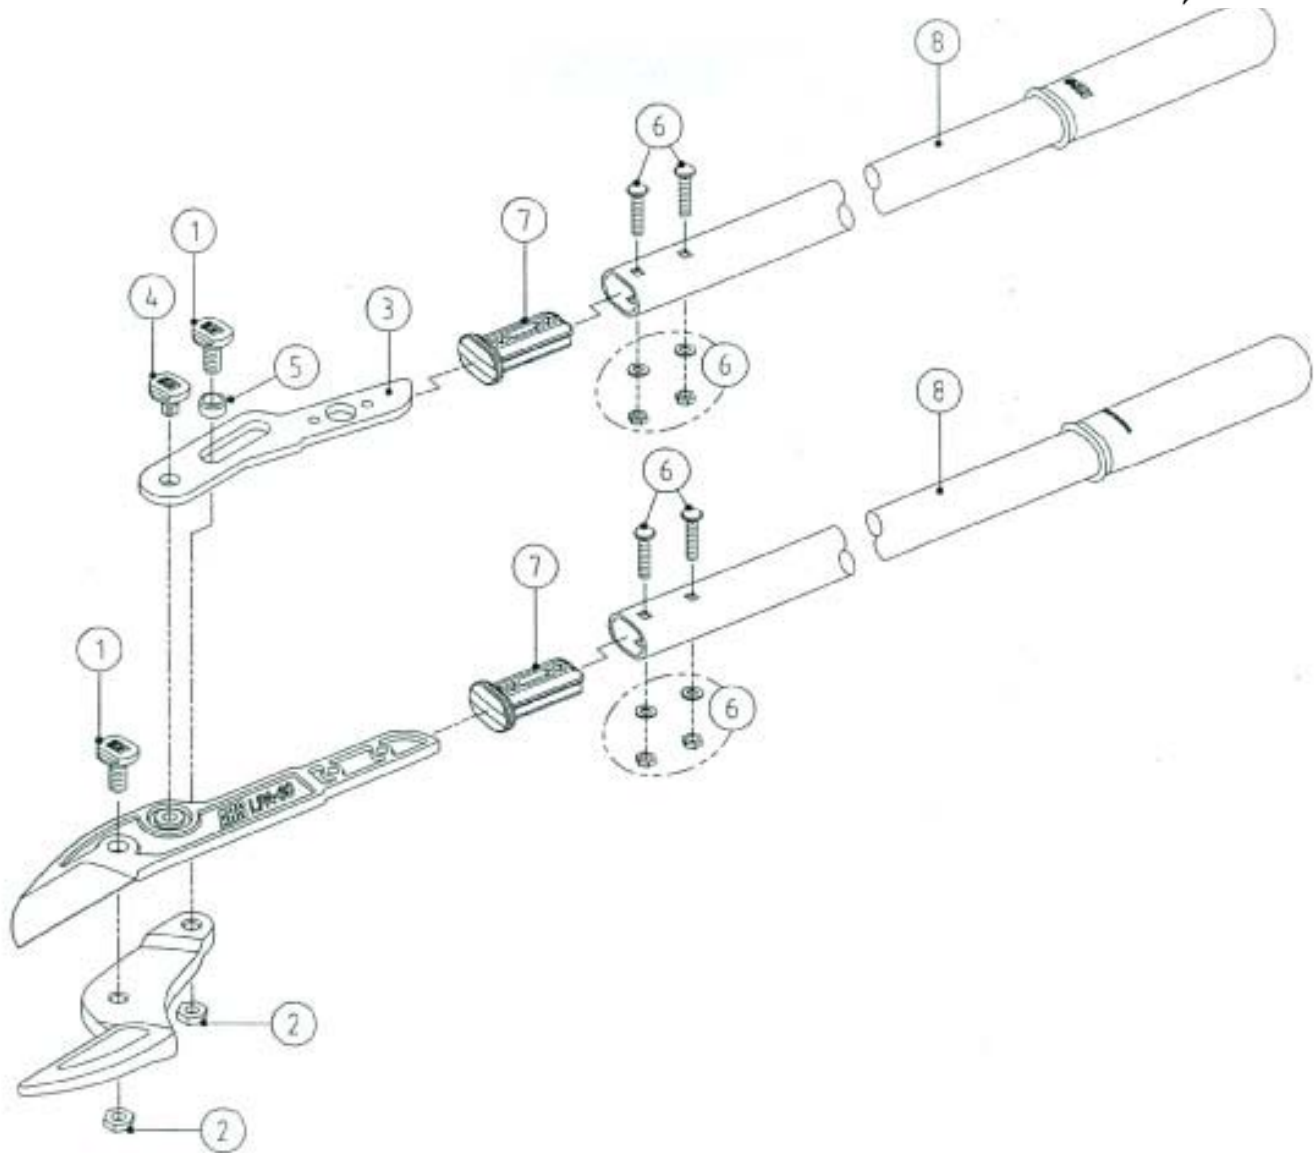

1. Center Bolt
2. Center Nut
3. Link
4. Fulcrum Bolt of Link
5. Link Spacer
6. Blade Holding Bolt, Nut, and Washer
7. Blade Holding Socket
8. Pipe with Grip

*All highlighted items are available from inventory.
All others are available by Special Order.*